

# Radio Controls and Indicators



# **Batteries and** Charging



Press and hold to communicate with others. With the microphone about five cm (2 inches) from your mouth, speak in a normal voice.

Release the Talk button when you are finished talking and listen for a response. You cannot receive incoming calls while pressing the Talk button

NOTE Both radios must be tuned to the same channel to communicate.



## **Call Button**

Press and release to alert others that you are calling.



**AM245** 

KEM-ML38104B

**Antenna** Belt Clip 4 0 NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.

## **Batteries**

To install or replace batteries: Remove Belt Clip 1. Remove belt clip by releasing belt clip 2. Pull up on the battery door latch to 3. Insert the supplied three AAA recharge Pull Latch Up

4. Replace battery compartment cover and belt clip. Insert Batteries

. Do not attempt to charge alkaline batteries.

latch and sliding clip up.

remove the battery compartment cover.

rechargeable alkaline batteries). Position

batteries according to polarity markings.

able batteries (also works with non-

· Do not mix old and new batteries.

. Do not mix alkaline, standard (carbonzinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.

. The radio is not intended to be used while being charged.

Maximum/Minimum Operating Range: -20°C to +45°C.

Caution - Risk of fire or explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions

Use only the supplied rechargeable batteries and charger for recharging your Cobra microTALK® radio.

Maximum SAR values: 0.637 W/kg for FM 12.5KHz (Body-Worn). Frequency Band: 446MHz.

Average and maximum radio-frequency power: 410mW.

Battery

Cover

Compartment



# LCD Display


# b

# **Declaration of Conformity (DoC)**

#### **Channel Number**

While in **Standby** mode or when selecting a channel, shows current channel (1 through 8).

When adjusting the volume, shows current level (1 through 8).

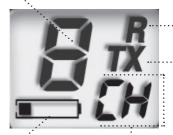

## Receive Icon

Visible when receiving a message.

# Transmit Icon

Visible when transmitting a message.

### **Battery Low Icon**

Blinks when battery power level is low.

Your microTALK® radio has a unique circuit designed to extend battery life. If there are no transmissions within 10 seconds, the radio

will automatically switch to **Battery Save** mode. This will not affect the radio's ability to receive incoming transmissions.

## Channel/Volume Indicator

"CH" is visible when in **Standby** mode or when selecting a channel.

"LE" is visible when adjusting volume.

We, the company

Altis Zenus BV in the Netherlands Wassenaarseweg 57.

2596CL The Hague

declare under our sole responsibility that the following

product
Type of product: Walkie Talkie
Trademark: Cobra
Model: AM245

Further details: battery operated, 446MHz

meets the essential requirements of the following FLI-Directives:

2014/53/EU Directive on the making available of radio

equipment on the market 2011/65/EU Annex II amending Annex (EU)2017/2102

Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment

applied standards and regulations:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013 FN 50566:2013

EN 300 296 V2.1.1

IEC 62321-8:2017

EN 301 489-1 V2.1.1 EN 301 489-5 V2.1.1

IEC 62321-3-1:2013 IEC 62321-4:2017 IEC 62321-5:2013 IEC 62321-7-2:2015 IEC 62321-7-2:2015

Authorized person for technical documentation: Name, Position: Jaap Derk Buma, Director



The Hague,

30-10-2018 Date

Signature

#### Trademark

CEEL™ is a registered trademark of Cobra Electronics Europe, Ltd.

Snake design and microTALK® are registered trademarks of Cobra Electronics Corporation, USA.

#### Warranty & Customer Service

For warranty and customer service information, please contact your dealer.

For use in EU countries, subject to local laws and

regulations.

©2019 Altis Zenus BV in the Netherlands Wassenaarseweg 57, 2596CL The Hague Niederlande/ Netherlands







